

SINGLE PACKERS – INSTRUCTIONS


The inflation hose is connected its orifice and the packer is lowered into the borehole on injection tube.
When the packer is at the required depth, it is inflated using any neutral fluid or gas, usually water or compressed air.

Maintaining the pressure on the inflation line, injection is done through the central stainless steel injection tube.
When injection is completed the packer is deflated by simply bleeding off the pressure on the inflation hose.

Le flexible de gonflage est raccordé et l'obturateur est descendu dans le forage par l'intermédiaire du tuyau d'injection. A la profondeur désirée, l'obturateur est gonflé au moyen d'un liquide ou d'un gaz neutre : souvent de l'eau ou de l'air comprimé.

Tout en maintenant la pression de gonflage, l'injection est faite par le tube inox central.

Quand l'injection est terminée, l'annulation de la pression de gonflage permet de retirer l'obturateur. Huit diamètres sont disponibles entre 30 et 170 mm.

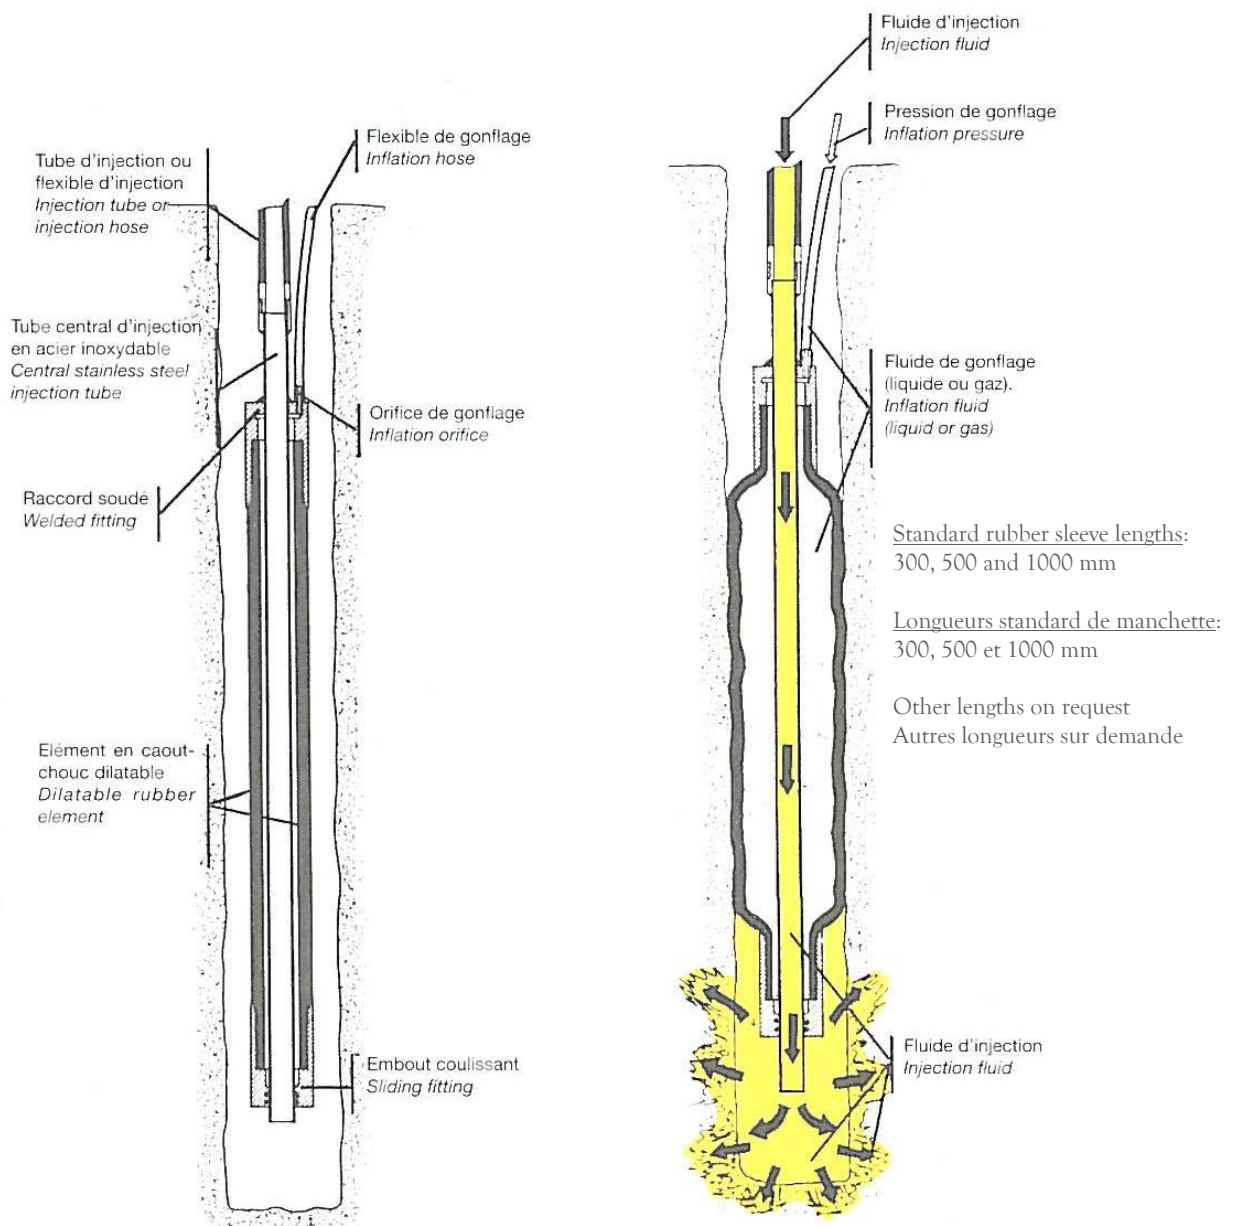

PETROMETALIC
11 Rue des Ecluses de Selles
F-59405 CAMBRAI CEDEX

E-mail : packers@petrometalic.com
Tel : (0033) 03 27 72 06 20
Fax : (0033) 03 27 72 06 31

Issue 10-2006/SC